

TO SET TIME AND CALENDAR

- ☐ Press and release the lower left button (M) until Dot indicator (mode) displays TIME.
- ☐ Press and hold the upper right button (B) for 3 seconds or until seconds flash.
- $\hfill \square$ Press and release the lower right button (A) to reset seconds to zero.
- \square Press and release the upper right button (B). Minutes will flash.
- ☐ Press the lower right button (A) to correct minutes (hold button down for rapid advance).
- \square Press and release the upper right button (B). Hours, AM or PM will flash.
- \square Press the lower right button (A) to correct hours and AM/PM.
- ☐ Press and release the upper right button (B). Month number will flash.
- ☐ Press the lower right button (A) to correct month.
- \square Press and release the upper right button (B). Date will flash.
- ☐ Press the lower right button (A) to correct date.
- $\ \square$ Press and release the upper right button (B). Day of week will flash.
- ☐ Press the lower right button (A) to correct day of week.
- ☐ Press and release the upper right button (B). Year will flash.
- ☐ Press the lower right button (A) to correct year.
- ☐ Press and release the upper right button (B). 12H or 24H will flash.

- \Box Press the lower right button (A) to select 12 or 24 hour time display.
- \Box Press and release the upper right button (B) to finalize time/calendar setting.

TO SET THE ALARM TIME

- ☐ Press and release the lower left button (M) until DOT indicator (mode) window displays ALM.
- ☐ Press and hold the upper right button (B) for 3 seconds or until alarm hours flash.
- ☐ Press the lower right button (A) to correct alarm hours.
- ☐ Press and release the upper right button (B). Alarm minutes will flash.
- ☐ Press the lower right button (A) to correct alarm minutes.
- \square Press and release the upper right button (B) to finalize alarm time setting.
- ☐ Press and release the lower right button (A) while in Alarm mode (steady display) to switch alarm ON or OFF. If alarm time is shown, alarm is activated. While the lower right button (A) is depressed, alarm sound can be checked

TO DISPLAY AIR TEMPERATURE

☐ While watch is in the Time/Calendar mode, press and release the lower right button (A). DOT indicator (mode) window now displays TEMP.

Watch samples air temperature every 10 seconds for the first 3 minutes, then at 30 minute intervals thereafter.

DIVE LOG MODE (DIVE MEMORY)

☐ Press and release the lower left button (M) until DOT indicator (mode) displays 'LOG' or 'PLOG'.

 \square If no dive data has been recorded, display will show only 'LOG' and dashes where data should be.

☐ If a valid dive has been recorded in the memory, display will show 'PLOG' and dive profile data can be transferred.

ADDITIONAL MODES

- ☐ Dive mode is automatically activated and begins to display when watch is submerged to at least 4 feet.
- ☐ Surface mode is automatically activated after a valid dive is completed.
- $\hfill\Box$ Transfer mode may be used only after a valid dive has been stored in the memory (PLOG).

For further instructions and details of the many additional features of the Hyper Aqualand, please refer to the full instruction manual or our website at www.citizenwatch.com.